

Attention: refer to manufacturer for correct fitting instructions. To avoid damage to your inflatable Lifejacket:


- Check Lifejacket for correct cylinder size
- Ensure Lifejacket is clean and dry
- Ensure Lifejacket is fully deflated
- Inspect Lifejacket for damage

Incorrect fitting or packing of incorrect components may result in failure to operate or inflate properly.

All inflatable Lifejackets must be serviced annually by an approved service station.

AUTOMATIC OPERATING MECHANISM


United Moulders Automatic Mk5i

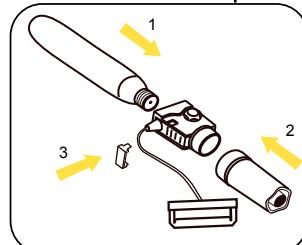

Re-arm: 1. Replace Cylinder
2. Replace firing capsule
3. Replace retaining clip


Lifejacket repacking

1. Remove all air, open zip.

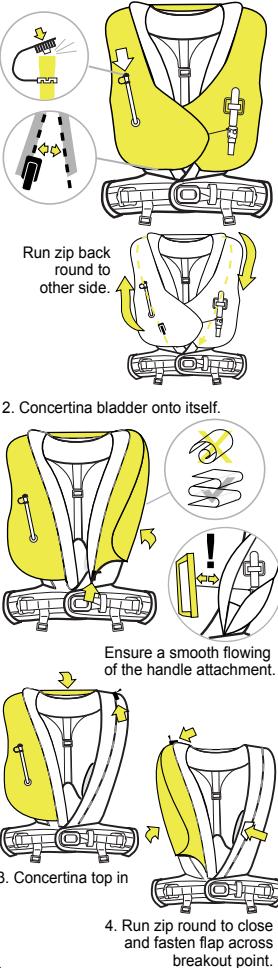

Accessory: United Moulders re-arming kit

For Automatic and Manually operated inflatable Lifejackets

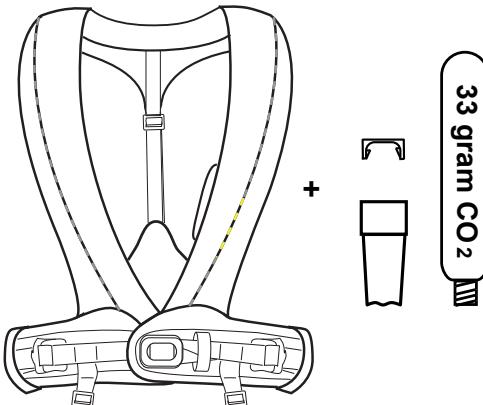

Fitting retaining clip: The clip is fitted by positioning one side into the recess first. Then press the clip over the firing arm into the recess on the other side. The clip will click in place, preventing the arm from moving.

Fitting cylinder: Check that the cylinder sealing gasket in the end of operating head has been fitted correctly (or replace if necessary). Ensure that the cylinder is the correct weight before fitting to the Lifejacket. With the retaining nut fastened, screw the CO₂ cylinder into the operating head by hand 'firmly'.

Fitting firing capsule: Screw the new firing capsule onto the operating head, tightly to the end. (Shelf life /pre-service life remains 3 yrs from date of manufacture).


deckvest™

www.spinlock.co.uk

3R363A/1


Lifejacket repacking

1. Remove all air, open zip.

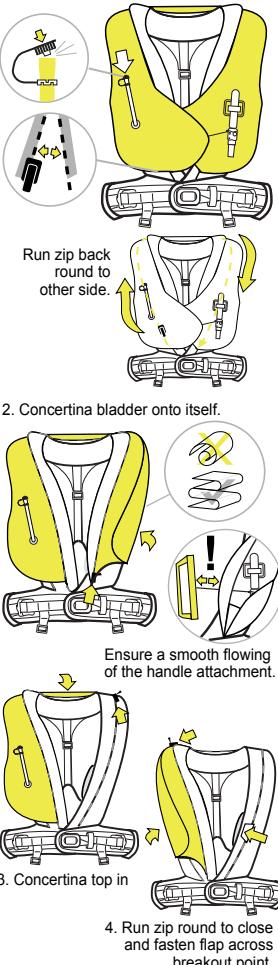

Accessory: United Moulders re-arming kit

For Automatic and Manually operated inflatable Lifejackets

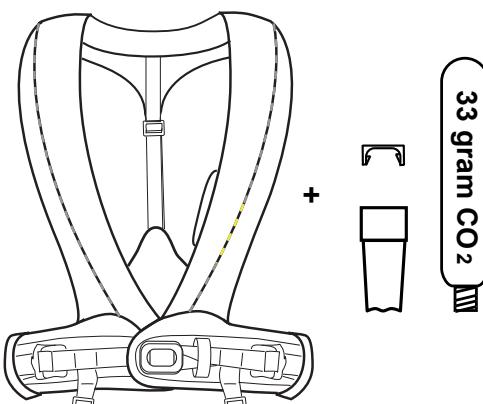

Fitting retaining clip: The clip is fitted by positioning one side into the recess first. Then press the clip over the firing arm into the recess on the other side. The clip will click in place, preventing the arm from moving.

Fitting cylinder: Check that the cylinder sealing gasket in the end of operating head has been fitted correctly (or replace if necessary). Ensure that the cylinder is the correct weight before fitting to the Lifejacket. With the retaining nut fastened, screw the CO₂ cylinder into the operating head by hand 'firmly'.

Fitting firing capsule: Screw the new firing capsule onto the operating head, tightly to the end. (Shelf life /pre-service life remains 3 yrs from date of manufacture).

deckvest™

www.spinlock.co.uk

3R363A/1

Attention: refer to manufacturer for correct fitting instructions. To avoid damage to your inflatable Lifejacket:


- Check Lifejacket for correct cylinder size
- Ensure Lifejacket is clean and dry
- Ensure Lifejacket is fully deflated
- Inspect Lifejacket for damage

Incorrect fitting or packing of incorrect components may result in failure to operate or inflate properly.

All inflatable Lifejackets must be serviced annually by an approved service station.

AUTOMATIC OPERATING MECHANISM

United Moulders Automatic Mk5i

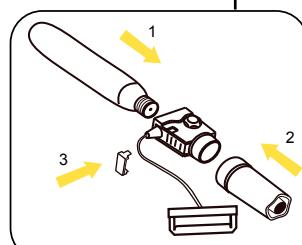

Re-arm: 1. Replace Cylinder
2. Replace firing capsule
3. Replace retaining clip